



# Challenger 300: Replacing the handle

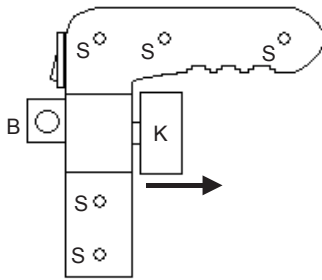

Pull off the speed control knob (K).


On the underside of the handle, locate and remove the 5 retaining screws (S) and the side bolt (B) using a Philips screwdriver.

Open the two halves of the handle

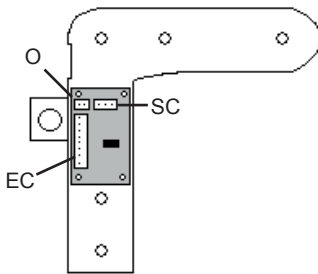

In the upper part of the handle, gently remove the on/off switch connector (O), the speed control connector (SC) and the 8 way connector (EC) from the printed circuit board using small pliers if necessary.

Remove the small self-tapping screws in the corner of the printed circuit board and remove the circuit board.

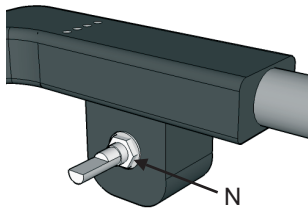


In the lower part of the handle, detach the speed controller by unfastening the retaining nut (N) and the washer.

Reattach the speed controller to the new upper handle.

Fasten the printed circuit board into the upper part of the new handle using the self-tapping screws.

Ensure that the LCD lights fit neatly into the holes in the handle.

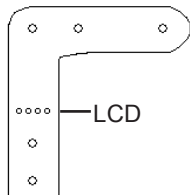

Reconnect the plugs for the on/off switch, speed control and the 8-way connector.

Refasten the two parts of the handle using the 5 screws and the side bolt ensuring all are fully tightened.

Ensure that the on/off switch is correctly located and that no wires are trapped.

## IMPORTANT

When refastening the handle to the trolley, ensure that the cable inside the aluminium frame is not trapped between the two parts of the handle.

If you are unsure about these instructions, or require any further assistance, please call our Service Department on:

**01933 670997**

where we will be pleased to help.

[www.powerprogolf.com](http://www.powerprogolf.com)