



# Challenger 300: Replacing the on/off switch

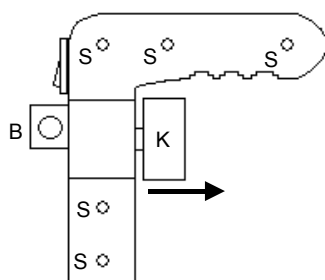

On the underside of the handle, locate and remove the 5 retaining screws (S) and the side bolt (B) using a Philips screwdriver.

Remove the upper part of the handle, leaving the lower part in situ if possible.

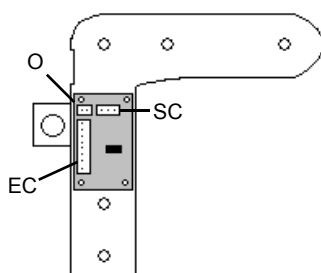

In the upper part of the handle, gently remove the on/off switch connector (O) from the printed circuit board using small pliers if necessary.

Connect the plug (O) of the replacement on/off switch.

Refasten the two parts of the handle using the 5 screws and the side bolt ensuring all are fully tightened.  
Ensure that the on/off switch is correctly located and that no wires are trapped.

## IMPORTANT

When refastening the handle to the trolley, ensure that the cable inside the aluminium frame is not trapped between the two parts of the handle.

If you are unsure about these instructions, or require any further assistance, please call our Service Department on:

**01933 670997**

where we will be pleased to help.