



Trojan[®] Electric Golf Trolley


Fitting Instructions for crimped connector type A

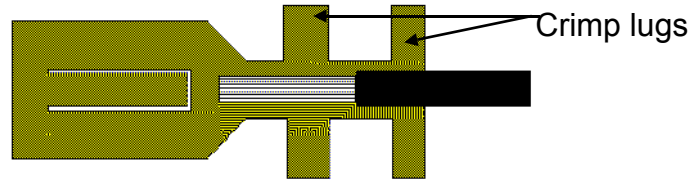

- 1 Remove approx . ½” of covering from wire using wire stripper or sharp knife. Take care!
- 2 Place wire in crimp connector as above
- 3 Using pliers, fold brass lugs over exposed wire and flex (as below) and crimp tightly

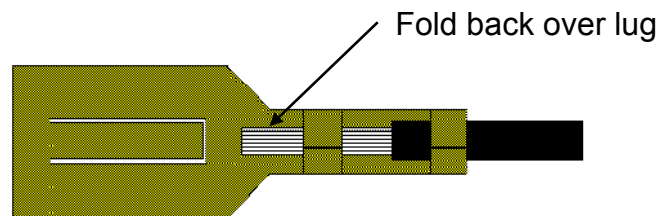

- 4 Fold back any exposed wire over the crimped lugs. This makes the fitting more secure

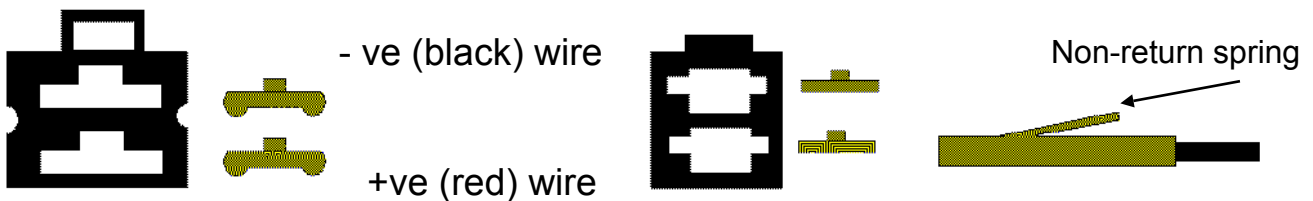

- 5 Insert the brass connectors into the housing from the rear of the housing. Ensure the non-return spring tab fits into the notch of the fitting slot.
- 6 Push the connector fully into the housing. A small click may be heard when the connector is engaged

IMPORTANT - the **black** (-ve) wire is fitted into the upper part of the housing, nearest to the connecting socket/plug
The **red** (+ve) wire is fitted into the lower part of the fitting.

If you encounter any difficulties, please call us on 01933 670997 where we will be