



Challenger 300: Replacing the Speed Control

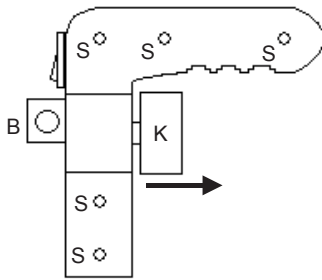


Pull off the speed control knob (K).

On the underside of the handle, locate and remove the 5 retaining screws (S) and the side bolt (B) using a Philips screwdriver.

Open the two halves of the handle.

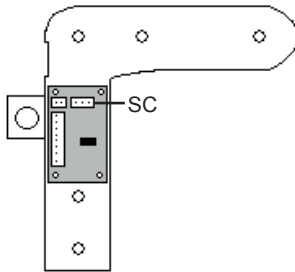

In the upper part of the handle, gently remove the speed control connector (SC) from the printed circuit board using small pliers if necessary.

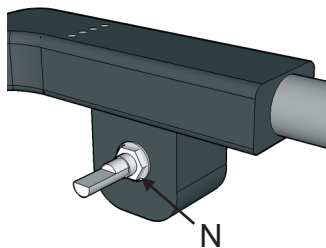

In the lower part of the handle, detach the speed controller by unfastening the retaining nut (N) and remove the washer.

Attach the new speed controller to the lower handle with its washer and nut (N).

Reconnect the speed control plug (SC) to printed circuit board.

Refasten the two parts of the handle using the 5 screws and the side bolt ensuring all are fully tightened.

Ensure that the on/off switch is correctly located and that no wires are trapped.

Push on the speed control knob (K).

IMPORTANT

When refastening the handle to the trolley, ensure that the cable inside the aluminium frame is not trapped between the two parts of the handle.

If you are unsure about these instructions, or require any further assistance, please call our Service Department on:

01933 670997

where we will be pleased to help.

www.powerprogolf.com